

TECHNICAL INFORMATION
SEWING 15

GROZ-BECKERT®

NEEDLES FOR THE PROCESSING OF LEATHER PERFECT SEAMS FOR ALL APPLICATIONS



The leather worker's trade is one of the oldest in the world.

These days in most of the cases the fashion industry decides about the seam appearance, besides good durability. A good seam construction should also offer a decorative seam appearance. In order to guarantee economic production, such seams are produced on modern machines and with high machine speeds.

Customer's requirements are in general permanent production security with minimum machine downtime and constant product quality. The following demands are given priority during the constructive and sewing development of the needle:

- Minimum needle breakage
- Minimum skip stitches
- Minimum thread breakage
- Quality of the cutting point (sharpness and position)
- Maximum lifetime

The results of this research and development work are realized in today's Groz-Beckert cutting point needles.

THE SELECTION OF THE CORRECT NEEDLE POINT

Based on the sort of leather and its composition

Leather with medium hardness

Soft leather




Recommendation: R, SD (LL, LR)




Recommendation: Depending on the requested seam appearance, all cutting points can be used.

Hard and thick leather

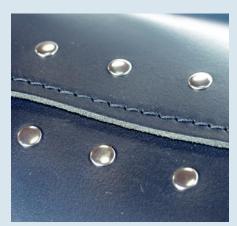

Recommendation: LR, VR, D, DH, DI

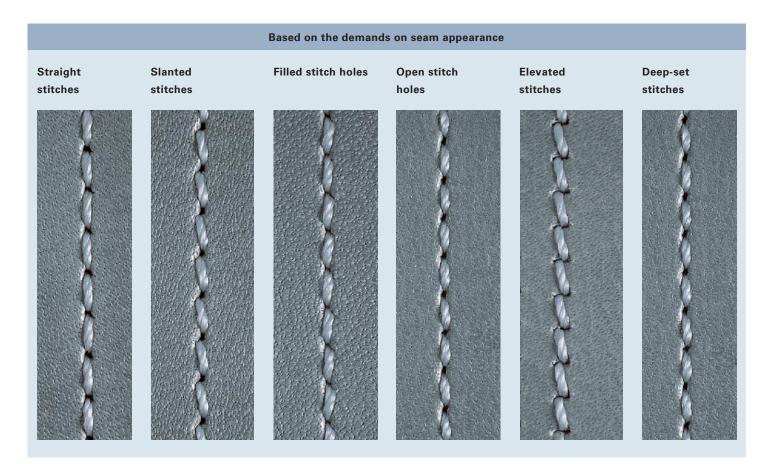

The pictures illustrating seams shown here and on the following pages, are based on the common threading direction from left to right. -○→ Seams were produced on leather of medium hardness.

THE RIGHT NEEDLE POINT FOR THE REQUIRED STITCH APPEARANCE

LR - point

Cuts the leather to the right at a 45° angle in the direction of sewing. Slight to medium slanted stitch formation, depending on the leather. The sewn thread is slightly elevated. Stitch holes are easily visible. Suitable for short to medium stitches.



VR - point

Technically obsolete point style. Cutting effect, seam appearance and seam characteristics identical to LR-point.



Application field:

For the production of decorative seams on soft to medium/ hard leather. Can be used on almost every type of leather.

Example:

Shoes, bags and leather garments, trekking shoes, suitcases, ...

Application field:

Formerly recommended for hard leather. High quality LR-points are unconditionally applicable for these leather types.







LL - point

Cuts the leather to the left at a 45° angle in the direction of sewing. Straight stitch formation. The sewn thread is slightly elevated. Stitch holes are filled. Suitable for medium to short stitches.



D - point

Cuts the leather with a prominent triangular shape. Straight stitch appearance. The sewn thread is slightly elevated. Stitch holes are relatively large. Medium to short stitches possible.





Application field:

For the production of straight seams with a continuously closed seam appearance. Can be used on almost every leather type.

Example:

Bags, shoes and car seats...



Application field: Example:

Suitable for straight sewing. Effective on hard and thick leather as well as cartons.

Belts, suitcases, heavy shoes and plastics...



THE RIGHT NEEDLE POINT FOR THE REQUIRED STITCH APPEARANCE

DH - point

Leather is cut with a medium triangular shape. Straight stitch appearance. The sewn thread is slightly elevated. Stitch holes are relatively large. Suited to medium to long stitches.





SD - point

Round set point with a small triangular tip cutting edge. Cuts leather with a slight triangular shape. Straight stitch appearance. The sewn thread is slightly elevated. Suitable for short to medium stitches.



P-point

Cuts the leather perpendicular to the sewing direction. On thick and hard leather it creates a prominent decorative stitch due to the heavily slanted stitch formation. The sewn thread is raised and exposed. The sewn thread fills the stitch holes. Short stitches possible.



PCR - point

Stitch appearance same as the P-point.



Application field:

Suited to producing straight seams. Good performance on medium-hard and hard leathers.

Application field:

Producing stitches

straight and in-line.

Used on soft leat-

her and multidirec-

tional applications.

stitches. Well sui-

ted for heel and

closed seams.

that are almost

Example:

Upholstery, bags, shoes, tarpaulins, awnings and tents...



Example:

Shoes, leather garments, fine leather goods, leather embroidery (also on foils and laminated materials)...



Application field: Example:

Produces decorative Shoes, belts and upholstery...



Example:

Shoes, upholstery and bags...





THE RIGHT NEEDLE POINT FOR THE REQUIRED STITCH APPEARANCE

PCL - point

Seam appearance like the P-point.





Cuts the leather in direction of sewing. Straight in-line stitch appearance. In certain leathers and with particular stitch lengths, deep-set stitches are formed. Long and visible stitch holes. Suited for medium to long stitch lengths.





Stitch appearance similar to the S-point. Better cutting effect due to the 4 cutting edges. Precise stitches.



Application field:

For the production of very decorative seams, especially for the right seam on twin lockstitch machines.

Application field:

For the production

deep-set, straight

stitches. Suitable

for most leathers.

of seams with

Example:

Shoes, bags and upholstery....



Example:

Shoes, bags, belts, leather clothes and upholstery...



Application field: Example:

For the production Suitcases, bags, of seams with heavy shoes... deep-set, straight (also for awnings) stitches. Suitable for medium and hard leathers.

Application field:

embroidery and

multidirectional

applications.

Used on soft leather,



Example:

Sport shoes, garments, car seats... (also on foils and laminated materials)





Standard round point.

Cloth point – without cutting effect. Almost straight yet irregular and variable stitch appearance. Sewing thread is slightly elevated. Irregular and inconsistent stitch holes.

Suited to medium to long stitches.









SEAM STRENGTH

The thread

The higher the stitch rating (stitches per cm), the more thread is naturally in the seam.

Therefore, with an increasing number of stitches the thread related seam strength is also increased.

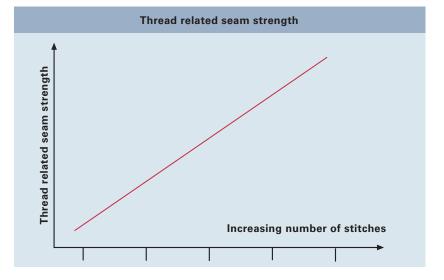

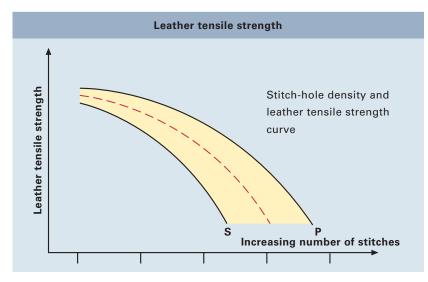

The leather and the needle points

The higher the stitch rating and the larger the needle, the more the leather seam is cut.


Leather tensile seam strength also depends on which point style is chosen. The highest leather tensile strength is achieved with a P-point, which cuts the leather perpendicular to the seam direction. The lowest leather tensile strength occurs with an S-point, which cuts the leather in direction of the seam (on conventional lockstitch machines).

The curves of all other cutting points are between P and S.

The seam


In practise, when tearing the seam (loading crosswise) maximum seam strength is achieved when the leather and thread break simultaneously. This is the point of intersection of the thread related seam strength and the leather tensile strength depending on which cutting point is used.

When changing the parameters cutting point and thread, the stitch length has to be adjusted to achieve the maximum seam strength again.

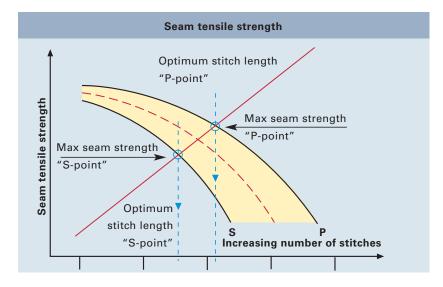


SEWING OF LEATHER ON TWIN LOCKSTITCH MACHINES

Twin lockstitch machines produce two parallel rows of stitches simultaneously. Ideally, the left and the right should have the same appearance. Due to different mechanical sewing principles between the left and the right needle, a seam appearance that is exactly the same is not normally possible.

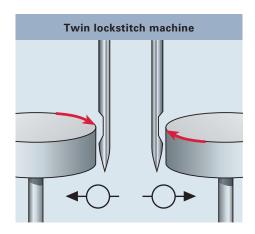


Different loop pickup

- For the machinist the left needle is threaded from right side to left. The needle thread loop is penetrated by the hook point and then pulled out against the direction of the material feed.
- The right needle is threaded from the left side to right. The needle thread loop is pulled out in the direction of the material feed.

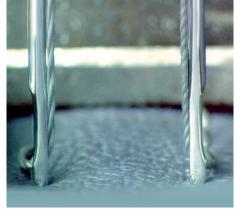

Twist shifting

- During the down-stroke the sewing thread of the left needle is pulled over the right edge of the eye and the sewing thread of the right needle is pulled over the left edge of the eye.
- When using normal "Z" ply-twist threads, the left needle produces an opposite rotational force than the right, creating a different ply-twist shift in the thread. Generally the heavier the thread the more pronounced this effect becomes.
- By using a CR-point designation on the left hand needle, the ply-twist shifting can be reduced slightly.

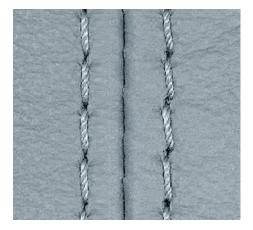

R - point


When using a standard round point-R, the left-hand side stitches are usually less slanted than the right. The left row of stitches demonstrates stronger plytwist shifting (untwisting). The degree of stitch appearance differences depends on the properties of the thread, the leather and the selection of the point style of needle.

Needles with cutting points produce greater consistency of stitch appearance. This is most visible with the cutting points:

LR - cutting point (on both sides)

Stitch to stitch, left and right stitches are regularly slanted towards the left. This results in an attractive seam of two duplicated rows of stitches. Stitch holes are easily visible.



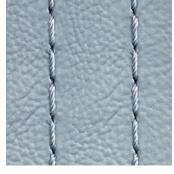


LL - cutting point (on both sides)

An LL cut in leather and the resultant stitch knot form produce thread twisted into this cut and towards the direction of the seam. This results in a stitch appearance that is almost straight and with filled stitch holes.

THE INFLUENCE OF THE LEATHER ON THE SEAM APPEARANCE

Lengthways and across the grain, leather has a different structure. The hair follicles and sweat glands, which run the length of the animal from head to tail, are the reason for the different seam appearances depending on the sewing direction.

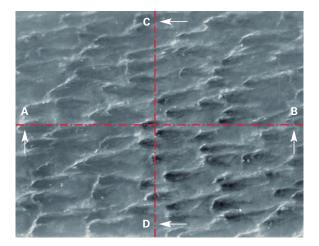



When using a needle with normal **cloth point (e.g. "R")** the stitch appearance will be different, and by what degree, depends on the sewing direction and properties of the leather.


In order to achieve a constant seam appearance in all directions, it is necessary to use a needle with a cutting point.

In case a straight stitch formation is desired in all sewing directions, the **S**, **LL**, **D** or **DH-cutting point** is recommended.

Where a seam with a slanted stitch formation is preferred, the use of **LR**, **VR or P-cutting point** is correct.

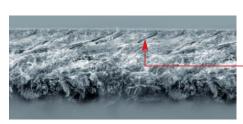



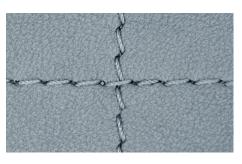


Section A-B

Hair follicles, sweat glands

Section C-D

Hair follicles, sweat glands

Seam appearance R-point

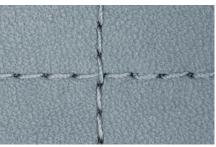



Seam

Seam appearance LR-point

GROZ-BECKERT KG

PO Box 10 02 49 72423 Albstadt, Germany Phone +49 7431 10-0 Fax +49 7431 10-3200 contact@groz-beckert.com www.groz-beckert.com The depictions provided of our products are not to scale and are intended for illustrative purposes only. Consequently they make no claim to be an accurate representation of the original.

In a sequence of the Groz-Beckert company group.
In a publication is copyrighted. All rights reserved, in particular the right of duplication, distribution and translation. This publication or any parts thereof may not be reproduced or stored, processed, duplicated or distributed using electronic systems in any form or by any means whatsoever without the express written consent of Groz-Beckert.